











What to do if...  
What to do if...

	A tire punctures	P. 477	If you have a flat tire
	The engine does not start	P. 486	If the engine will not start
		P. 83	Engine immobilizer system
		P. 492	If the vehicle battery is discharged
	The shift lever cannot be moved out of P	P. 487	If the shift lever cannot be shifted from P
	The display on the engine coolant temperature gauge flashes	P. 495	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 488	If you lose your keys
	The battery runs out	P. 492	If the vehicle battery is discharged
	The doors cannot be locked	P. 42	Doors
	The horn begins to sound	P. 85	Alarm
	The vehicle is stuck in mud or sand	P. 498	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 453

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 453



Malfunction indicator lamp

or



P. 454



ABS warning light

or



P. 454



Driver's seat belt reminder light

P. 456



Front passenger's seat belt reminder light

P. 456



Low fuel level warning light

P. 456



Master warning light

P. 456



SRS warning light

P. 454



Electric power steering warning light

P. 454



Open door warning light

P. 456



Pre-collision system warning light

P. 454



Charging system warning light

P. 454



Tire pressure warning light

P. 456



Slip indicator

P. 454



A warning message is displayed

P. 463

If a warning message is displayed